



## • 2-WIRE SENSOR DIRECTIONS •

### **General Description**

The plunger arrival sensor magnetically senses the arrival of a plunger at the surface. The sensor is strapped directly to the lubricator or tubing. There is no need for any stainless steel nipples. Hook-up is simple with only two wires. The internal lithium battery will last for years and withstand all weather conditions.

### **Installation**

Strap the sensor to the lubricator or tubing using the supplied stainless steel clamp. There are only two wires to hook-up. The black wire is the negative or common connection. The red wire is the control signal wire and goes in the shut or PS+ terminal. Actual hook-up may vary depending on manufacturer's controllers.



***Plungerlift***

7188 S.R. 39 East • Millersburg, OH 44654  
330-674-5981 • FAX: 330-674-2125